

 


# How to: Adjust Eject on a Stern Pinball

1. Open coin door
2. Locate service buttons



3. Press the black Menu button twice to enter the service menu.
4. Use the red button next to the Menu button to highlight "ADJ" Adjustments menu.

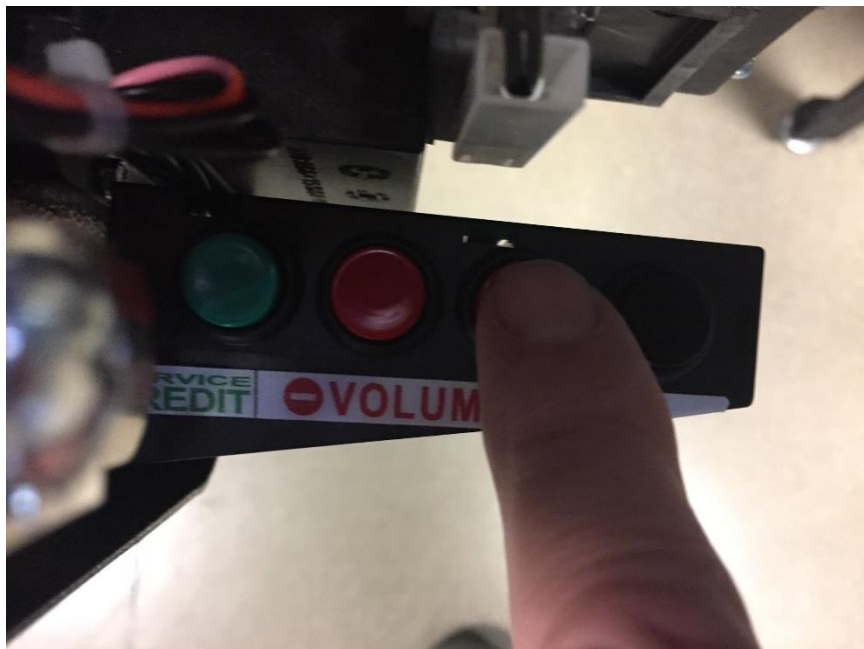



# How to: Adjust Eject on a Stern Pinball

5. Press the Menu button to enter Adjustments.



6. Use the red button next to the menu button to highlight "AERO" Feature Adjustments.







# How to: Adjust Eject on a Stern Pinball

7. Press the menu button.



 
8. Use the red button next to the Menu button to advance to "Feature Adjustment #7.



9. Press the menu button



# How to: Adjust Eject on a Stern Pinball

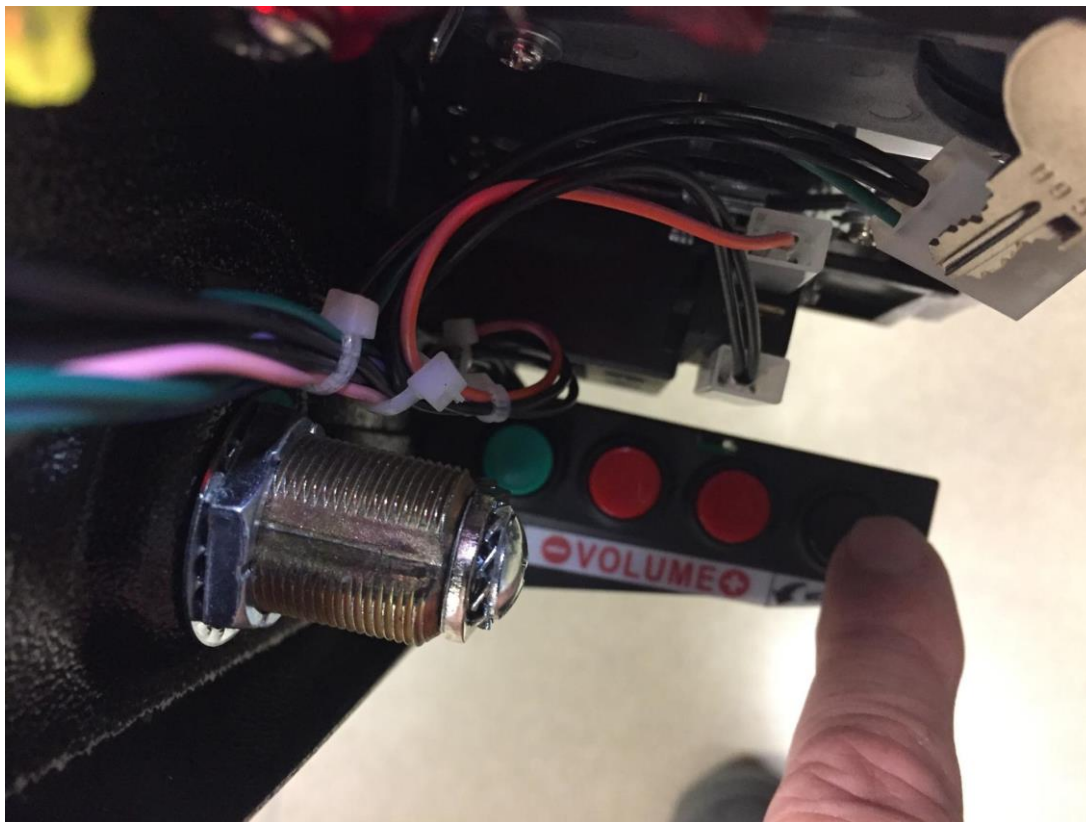

10. The number below “RIGHT EJECT POWER” will start flashing.







**GAME ROOM GUYS**

## How to: Adjust Eject on a Stern Pinball

11. Use the red buttons to raise or lower the number as needed, raising the number will increase the power, lowering the number will decrease the power.



12. Once the desired strength is reached, press the menu button again to store the number.



13. Press the green button repeatedly to return to game mode.

