





How to:

Ball Launch Test

1. Open the front door, locate the Solenoid power safety switch.

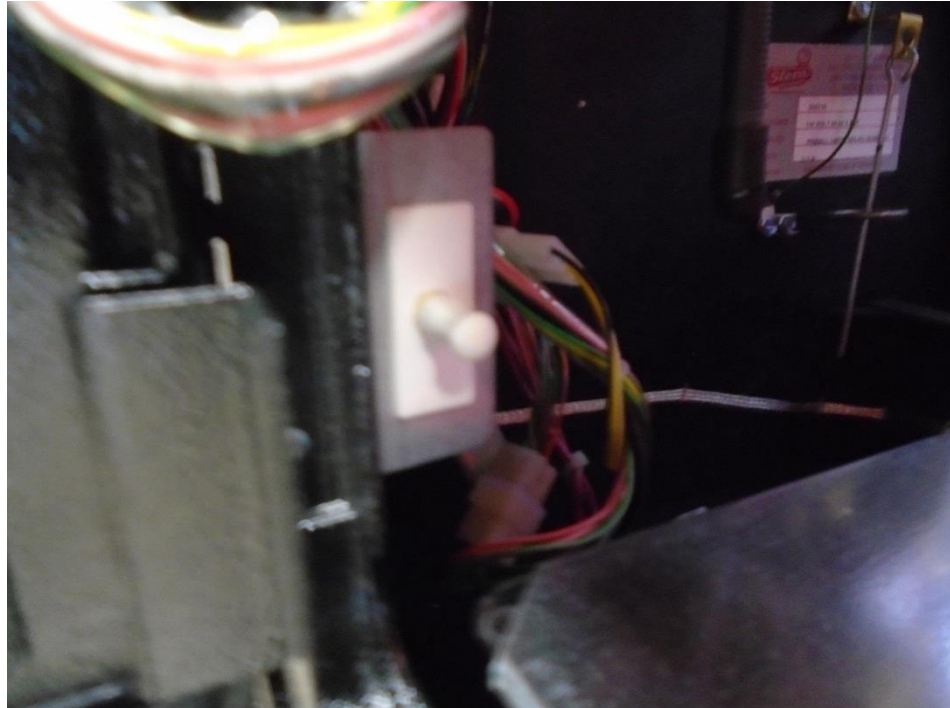

2. Pull the safety switch out into the locked position.

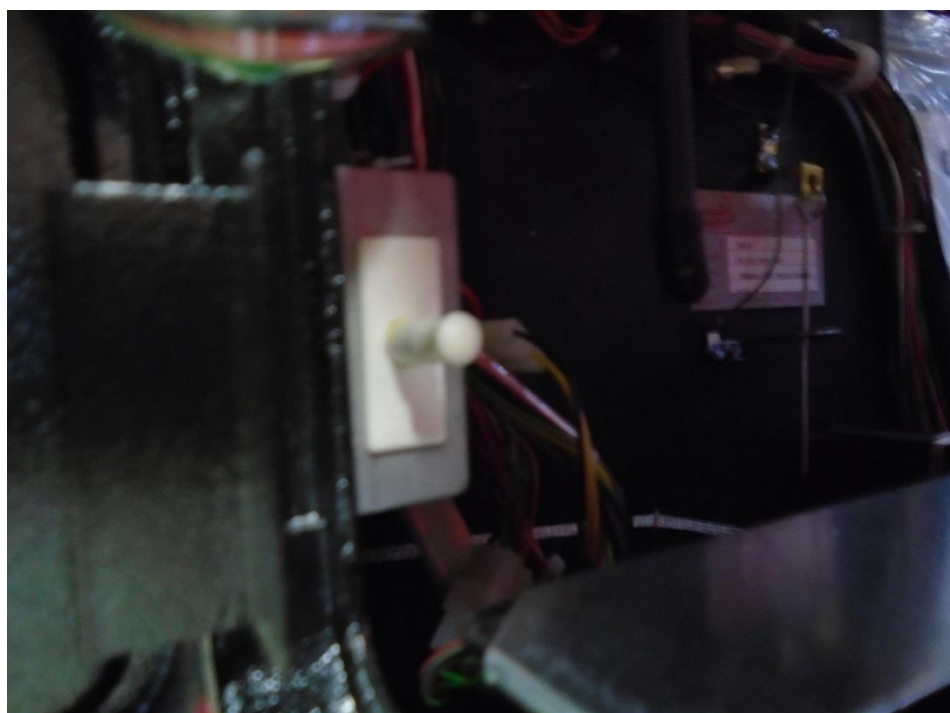




GAME ROOM GUYS

How to: Ball Launch Test

3. On the front door and locate the service buttons.



4. Press the black “Menu” button to bring up the service menu screen.

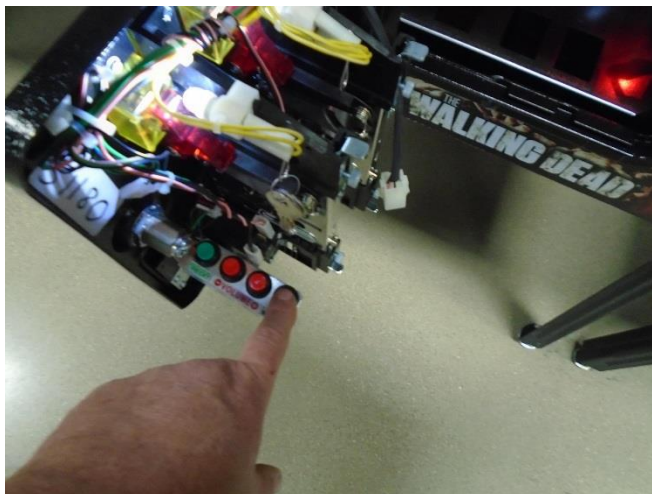



How to: Ball Launch Test

5. Press the “Menu” button again to bring up the Menu icons.




6. Press the “Menu” button again to enter the “DIAG” diagnostics Menu.





How to: Ball Launch Test

7. Press the Red Volume “+” button to highlight the “Coil” icon.

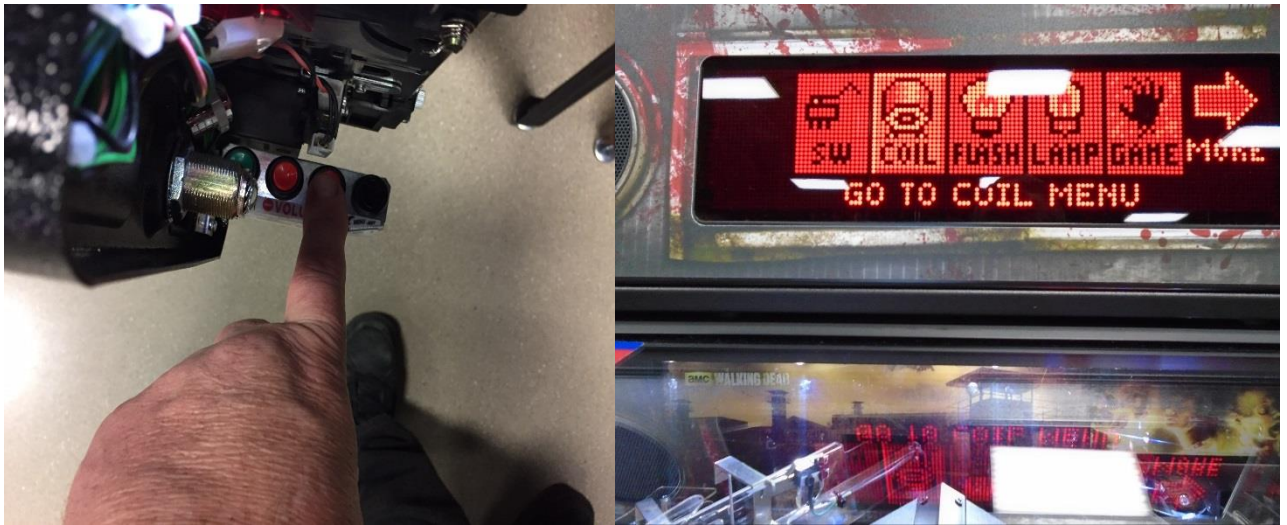


8. Press the “Menu” button to enter the coil test.





How to: Ball Launch Test

9. Press the “Menu” button again to select “Test”, this will bring up the “Trough eject” test

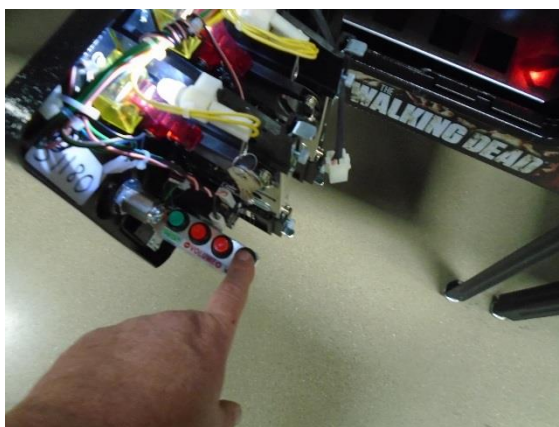

10. Pull the shooter rod back and hold it.



11. Press the “Menu” button. To kick a ball into the shooter lane. The auto launch will then fire kicking the ball onto the playfield.

12. If the ball launch works correctly with the shooter rod pulled back then release the rod and press the “Menu” button again. If the ball does not launch it is striking the shooter rod.