 





How to:

Adjust knocker volume on Stern Pinball.

1. Unlock and open coin door in front of machine.

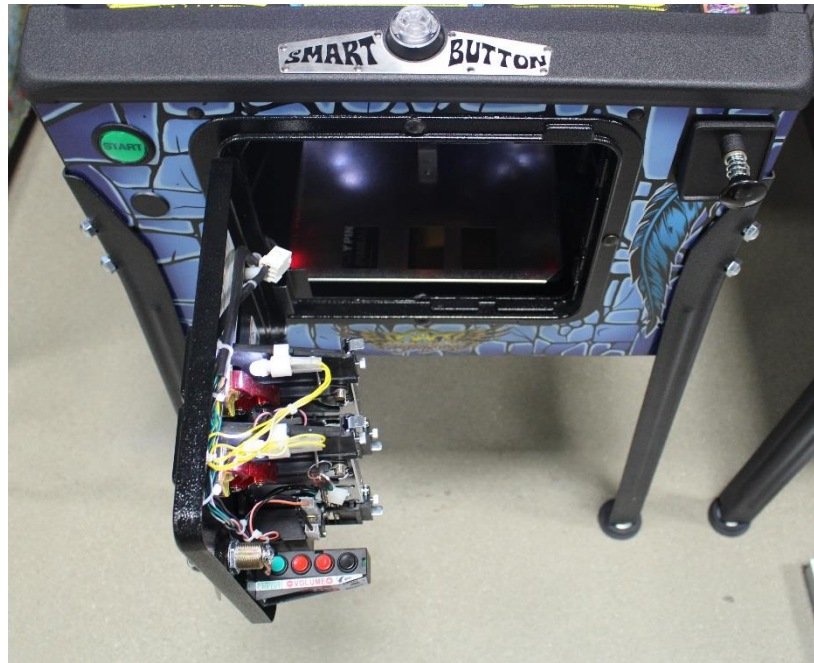

 2. Locate 'Menu' button and push to enter 'Service Menu'. Press 'Menu' button once more to enter 'Standard Adjustments Menu'.

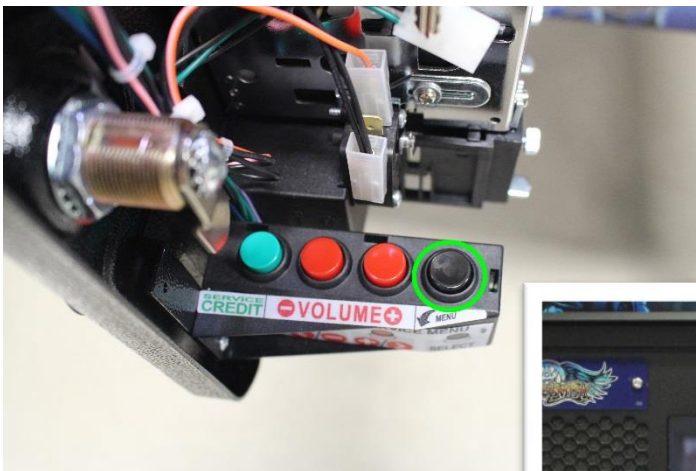




How to:

Adjust knocker volume on Stern Pinball.

3. Press the Volume + button to scroll to 'Adjustments'.

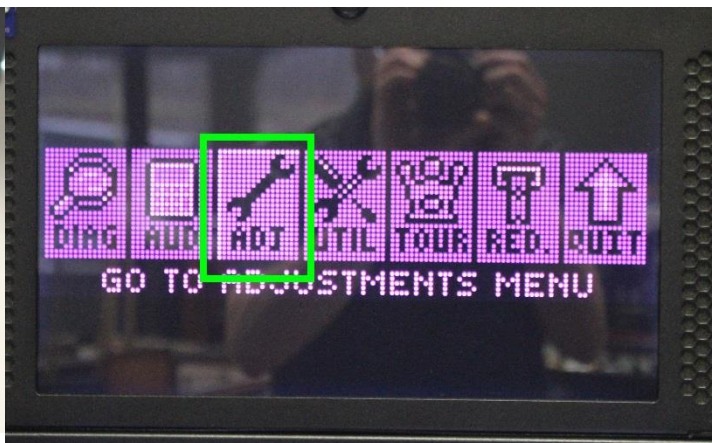

4. Press 'Menu' Button to select 'Adjustments'.

5. Press 'Menu' Button again to select 'SPI'.

 




How to:

Adjust knocker volume on Stern Pinball.

6. Use the Volume + button to scroll through until you see the standard adjustment for 'Knocker Volume'.

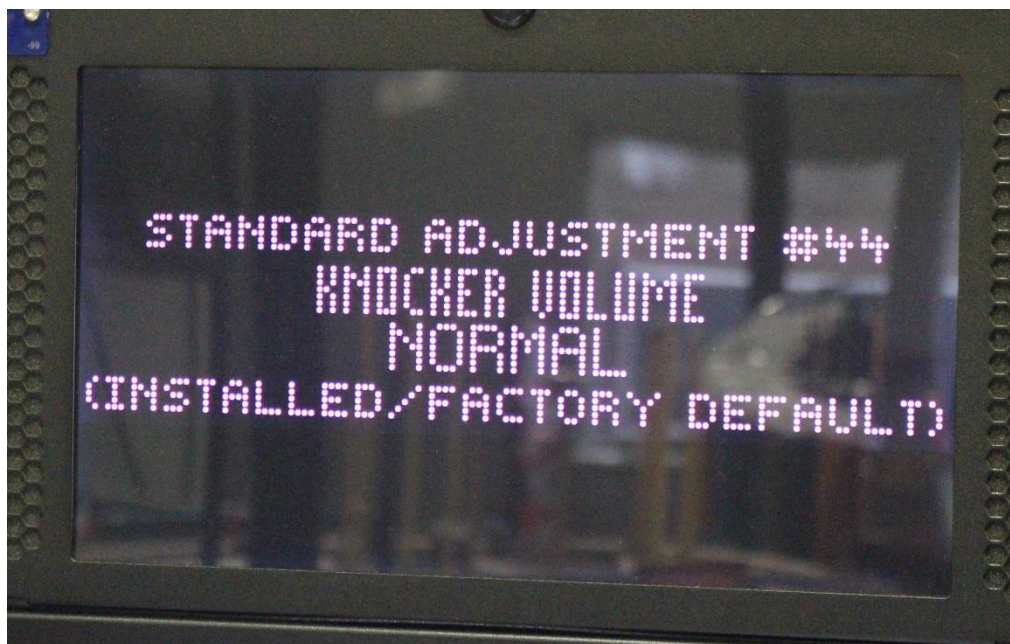

7. Press 'Menu' button to enter the setting. Press the Volume +/- buttons to adjust knocker volume.

8. Once set to preferred volume level, press the 'Service/Credit' button until you exit out of the service menu.

